 
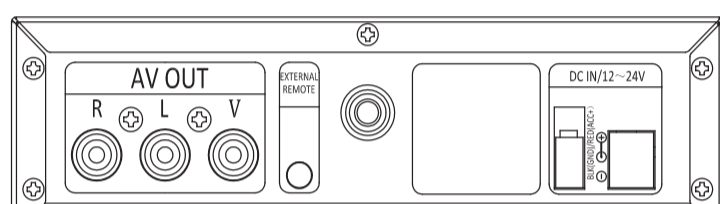 
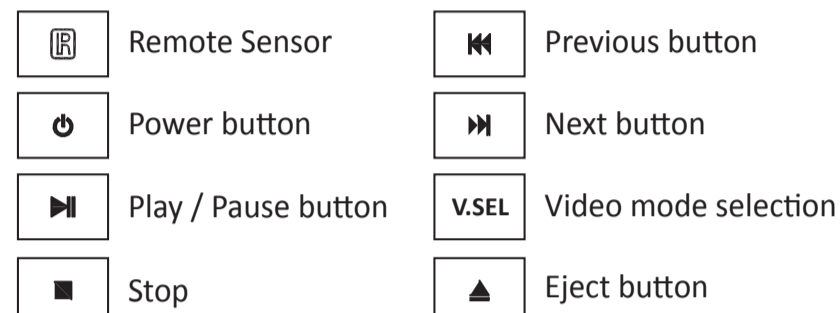 


## User's manual

Congratulations your new purchase of a DVD Entertainment system. Please take a moment to fully review this owner's manual thoroughly prior to the initial operation, which will provide you with the best understanding to properly operate your new Entertainment system.

### Description of buttons and ports

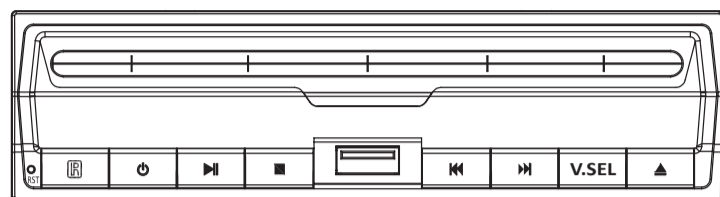

AV Out : Audio and Video Output  
External Remote : External Remote Sensor Output  
BLK(GND)/ RED(ACC+) : Power Connector input

## Remote Control



1	POWER	Power On/Off
2	VSEL	Change to Dics or USB Mode
3	SEARCH	Search
4	EXIT	Exit from the Current mode
5	SET-UP	DVD Menu Set-up
6	▲	Cursor Up
7	◀	Cursor Left
8	▶	Cursor Right
9	▼	Cursor Down
10	ENTER	Function Select
11	INFO	Display on Disc
12	⏸	Play & Pause
13	■	Stop
14	REPEAT	Repeat Function Change
15	◀◀	Rewind
16	▶▶	Fast forward
17	◀◀	Previous
18	▶▶	Next
19	1~0	Number Key
20	ZOOM	Zoom In and Out
21	ANGLE	Support DVD angle function
22	DVD TITLE	DVD Title Menu
23	SUB-TITLE	Sub-Title selection
24	AUDIO	Audio function change
25	DVD ROOT	DVD-Root Menu

 
## Important Safety Instructions

**CAUTION** PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE. This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.


### WARNING




DO NOT attempt to operate if picture fails or no sound is heard. Stop using the unit and turn it off immediately if there is any smoke or burning smell. If unit is damaged, it could cause fire or electrical shock.

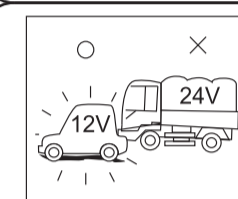

 This product is designed for DC 12V. It is recommended to check with a trained "Authorized Dealer" for using this unit in a RV, truck or bus application.

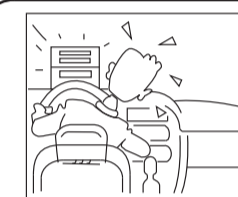


 DO NOT install unit where it may obstruct driver's sight or cause possible injury to passengers. DO NOT allow installation to interfere with normal vehicle operations. Wiring and installation should not interfere with the brake pedal, steering wheel or transmission shift lever.

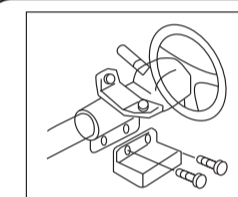


DO NOT remove any screws or hardware from vehicle to install products.


### WARNING

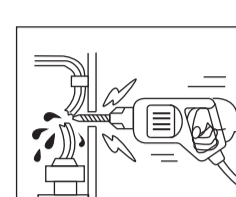 

 Inspect any vehicle areas before drilling any holes for mounting or wiring of unit. Make sure to check behind installation area to prevent damaging any existing vehicle wiring or other connections. Failure to do so could result in vehicle malfunction or impaired vehicle operation.

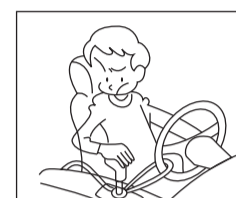

 All wiring must be routed safely and should not distract the driver's attention during normal operating conditions. DO NOT allow wiring to interfere with operation of the vehicle's brake pedal, shift lever or steering wheel.

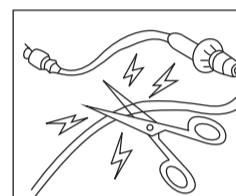

DO NOT cut or modify any DIN cables with fuse built-in. This could render such protective circuit inactive and potentially result in permanent damage to the unit or vehicle. Make sure both DIN cable and other wiring is not run where it may be cut or damaged.



The slots and openings in the unit is provided for necessary ventilation. These must not be blocked to ensure reliable operation.

## Basic Operation

### 1. Play a Disc

- 1) Press the Power button on the unit or remote
- 2) Inset the disc into the disc slot with label side facing-up
- 3) The Player starts playback automatically

### 2. Ejecting a disc

Press eject button on the unit

### 3. Stopping play

- 1.) Press stop button on the unit or remote to stop playback
- 2.) Press Play button on the unit or remote control to play the disc again

### 4. Rewind & Fast Forward

- 1) Move to Rewind track : Press ◀◀ button on the remote control during play. Each time Press ◀◀ button, track will be rewinded X2, X4, X8, X18, X32 times and the Play again
- 2) Move to Fast track : Press ▶▶ button on the remote control during play. Each time Press ▶▶ button, track will be Fast track X2, X4, X8, X18, X32 times and the Play again

### 5. Previous and Next

- 1) Press ◀◀ button on the unit or remote control to move to previous chapter
- 2) Press ▶▶ button on the unit or remote control to move to next chapter

### 6. Remote sensor (Infrared sensor for remote control)

- 1) Point the remote control to IR window on the unit to control the DVD functions
- 2) Point the remote control to External IR sensor (Included) to control the DVD functions

### 7. USB Play

 
- 1) Plug-in USB memory to USB slot on the unit
- 2) Please press VSEL button on the unit or remote to Change the DVD Mode to USB Mode
- 3) Internal folder will be showing up Move ▲ or ▼ cursor on the remote control to select the file
- 4) Press Play button on the unit or remote control to play the file
- 5) Press Stop button on the unit or remote control to stop playback

\*Only selected Audio & Video file format will be played with unit

## Specifications

1	Mechanism	Anti-Shock Steel supporting mechanism for Car
2	Mounting	Vertical/Horizon mounting for various usage
3	Video System	NTSC/PAL Auto
4	Support Disc	DVD Video, Compact Disc, CDR, CDRW, VCD
5	Audio Output level	1.5V± 0.1V (Under 250Ω )
6	Video Output level	1±0.2V (75Ω) Video outs
7	USB function	Multimedia Play-back Video : AVI, MPEG, MP4 Audio : MP3, WMA Photo : JPG
8	Characteristics	Frequency Response 20Hz~20KHz ( ± 2dB) S/N Ratio 90dB(JIS) (1KHz) Channel Separation > 85dB (1KHz)
9	Illumination	Blue LED illumination
10	Remote control	Full function remote control included Remote-eye extension cable included (1.5m)
11	Supplying Voltage	12Volt (9 ~ 16V) D.C input
12	Current Consumption	Less than 2A
13	Dimension(W X D X H)	146mm X 179mm X 38mm


### CAUTION

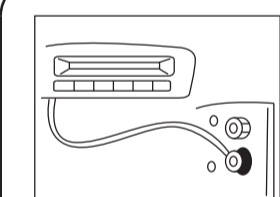


For the best results, follow wiring diagram for products a shown in the manual. Do not place unit on uneven or unstable surfaces, avoid dusty areas and unsealed doors, or openings where water may be splashed.



 DO NOT watch the unit while driving. Distracting the driver from proper operation of the vehicle can result in possible accident or injury. Proper installation allow the driver to only watch TV when the vehicle is stopped and the parking brake is applied.

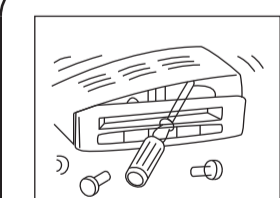


 DO NOT disassemble or modify the product as it may cause accident, fire or electrical shock.

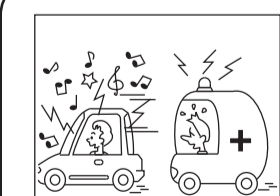


Set the volume to a moderate level, which will not prevent your hearing outside noises such as emergency vehicles.


### CAUTION

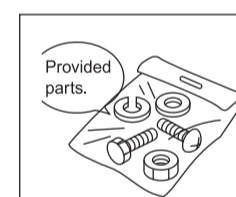 

 Use provided parts. Over-sized hardware may cause an electrical short or result in product not being mounted securely.

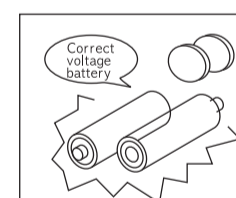

 Use correct voltage batteries only. Make sure to insert batteries observing correct polarity. Using old and new batteries is not recommended. Keep small objects such as batteries out of the reach of children. Swallowing them may result in serious injury.

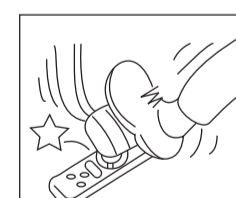

Keep the remote control in safe place when not in use to insure that the remote control does not interfere with the vehicle operation if it is dropped or shifts while driving.



DO NOT Install antennas where they could cause unexpected accident or injury to pedestrians.